

RR-CirKits, Inc.

Affordable Electronics for Model Railroads

LocoBuffer-NG Rev-a Quick Start Guide Revision-a

Getting Started

- The LocoBuffer-NG operates at USB speed. No USB port settings are required.
- Plug the LocoBuffer-NG into an unused USB port on your computer. Your computer should detect the new unit and load its drivers automatically.
- Some newer laptop computers without any USB Type A ports will require a USB Type C Male to USB Type A Female adapter cable.
- The right hand yellow status indicator should illuminate as soon as your drivers are installed and they recognize the LocoBuffer-NG.
- Connect the unit's LocoNet[®] jack to any point on your system's LocoNet[®]. The left hand green status indicator should illuminate, and the center red activity indicator should now indicate all LocoNet[®] traffic.
- Set your software's settings to match the new communications port.
- You should now be able to control your Railroad from your software.
- See <http://www.rr-cirkits.com/manuals/LB-manual-Rev-a.pdf> for further help.

RR-CirKits, Inc.
7918 Royal Ct.
Waxhaw, NC 28173
USA

<http://www.rr-cirkits.com>
sales@rr-cirkits.com
service@rr-cirkits.com
1-704-843-3769
Fax: 1-704-243-4310